



Lynbrook

CCAS6605

Installation Manual

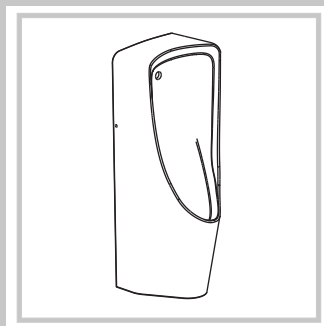

American Standard

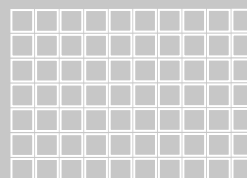

Thank you for selecting our products...products which have been the benchmarks of fine quality for years. To help ensure that the installation process will proceed smoothly, please read these instructions carefully before you begin. Also, review the recommended tools and materials list; carefully unpack and examine your new plumbing fixture.




ALL INSTALLATION PROCEDURES MUST COMPLY IN STRICT ACCORDANCE WITH APPLICABLE LOCAL PLUMBING AND BUILDING CODES

Remark: This installation manual is only for installing the ceramic parts. For the tank trim or seat & cover installing, please refer to relative manual.

RECOMMENDED TOOLS AND MATERIALS

Putty Knife	Adjustable Wrench	Channel Lock Pliers	Regular Screwdriver	Level	Hacksaw
Pipe Wrench	Plumber's Putty or Caulking	Tape Measure	Phillips Screwdriver	Drill	

ROUGHING-IN DIMENSIONS

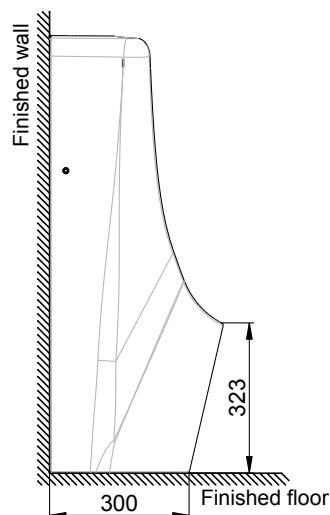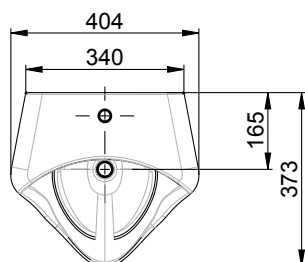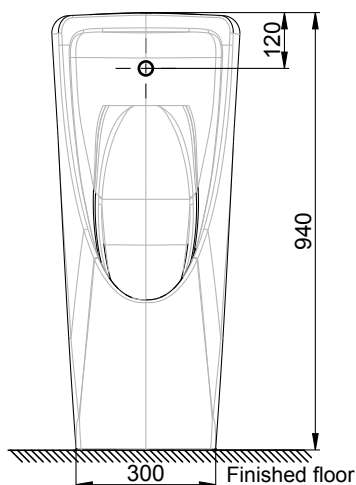


Dimensioning diagrams are provided for each model.
Note: dimensions are nominal and may vary within the range of manufacturing tolerances.

Unit: mm

SAVE FOR FUTURE USE

1

PIPING PREPARATION

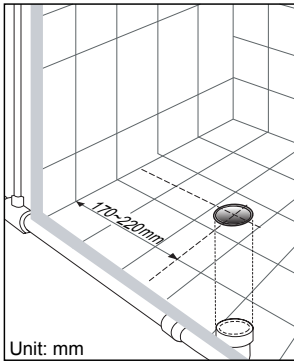


WASTE PIPE : Size Ø46mm (PVC, a regular pipe with an internal diameter of 46mm at the connecting point with the urinal and a gradient of 2cm, per 100cm.)


AIR VENT : Size not smaller than Ø1-1/2" and must be connected directly to the waste pipe.

2

MARK MOUNTING HOLES

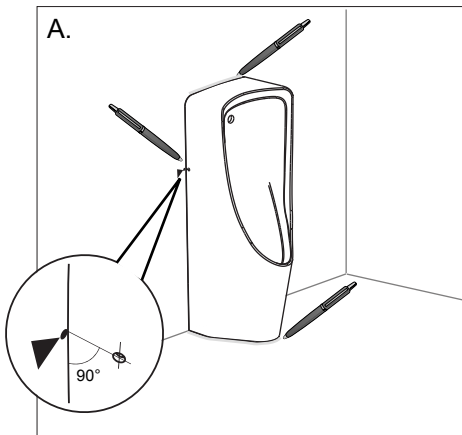


A. Set properly the VC on the floor, mark the location to be drilled. (the figure is for your reference)

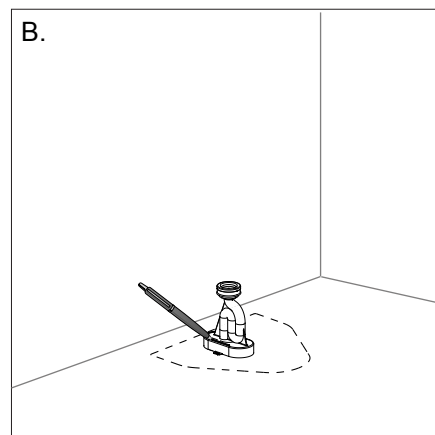

B. Move the plastic trapway to the designated position and mark the holes to be drilled.

3


PUNCHING

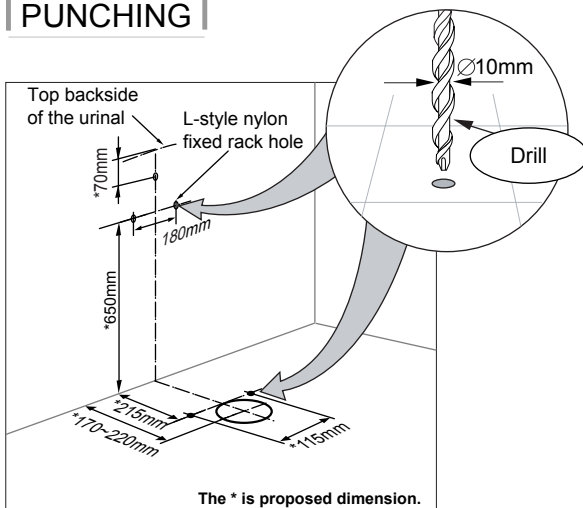

Using Ø10mm masonry drill bit, drill the floor and wall to connect the floor fixing set, follow floor fixing set, follow in the figures.


4

INSTALL FIXING SET & TRAPWAY

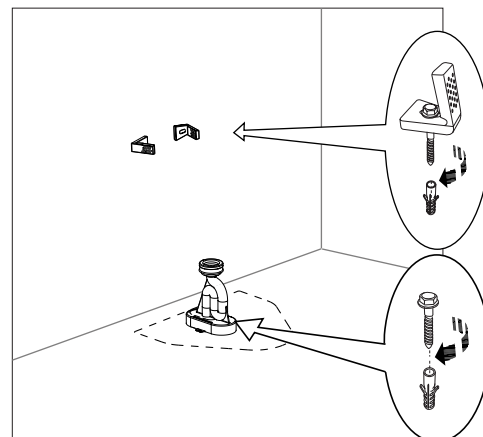

Install the floor fixing set and plastic trapway at the assigned location.


5 INSTALL THE SPREADER

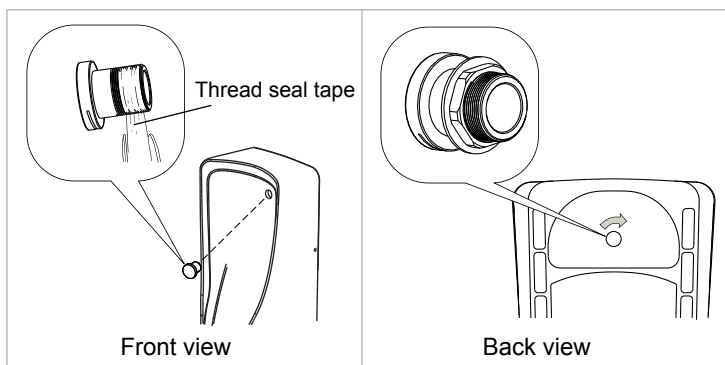


Apply thread seal tape to avoid water leakage.

6 INSTALL THE CONNECTION


A. Top inlet

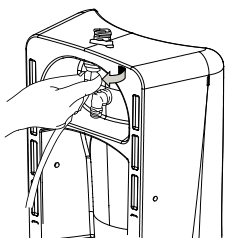


1. Install top water inlet spud.

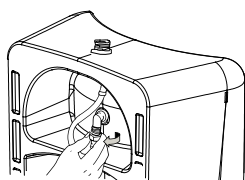

2. Connect water inlet pipe (Flush valve) with metal spud.

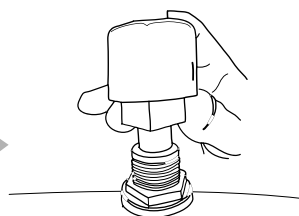


3. Supply 2 rubber rings for pipe $\Phi 18$ and $\Phi 16$ mm.

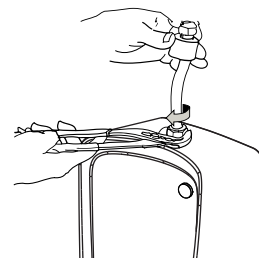


4. Connect with flush valve hose.

B. Back inlet

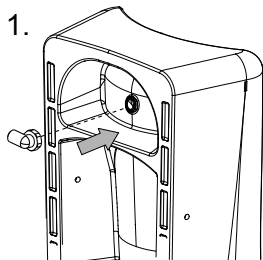


Install the back inlet components

1. Install the metal spud.

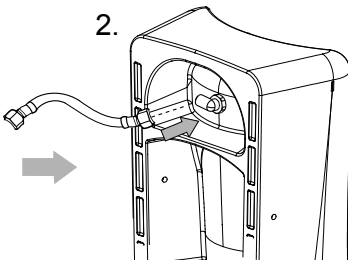


2. Connect water inlet pipe with metal spud.

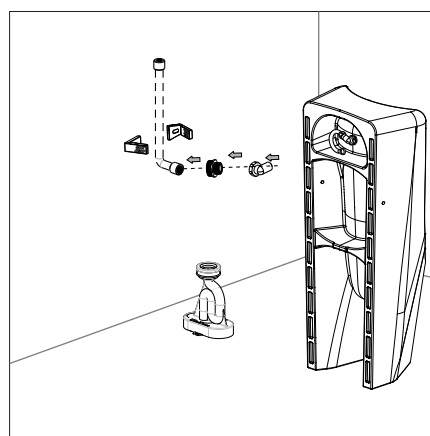

Connect the nipple and metal spud to the L-shaped bend, then connect the water supply hose.


7 INSTALL THE URINAL

A. Top inlet

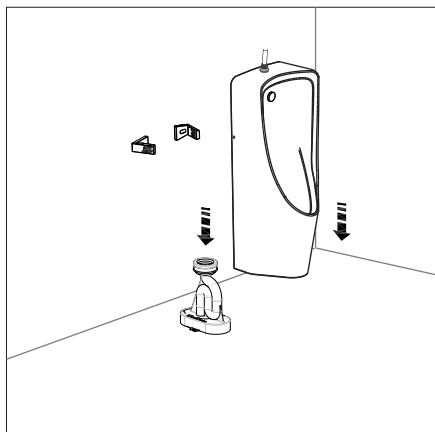


Lift the urinal with the assembly, position the urinal on the floor as picture shown.

B. Back inlet

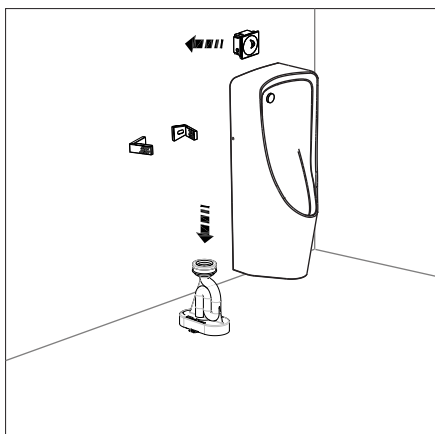


- Lift the urinal with the assembly, position the urinal on the floor as picture shown.
- Install the sensor according to sensor installation manual.


8 FIX THE URINAL

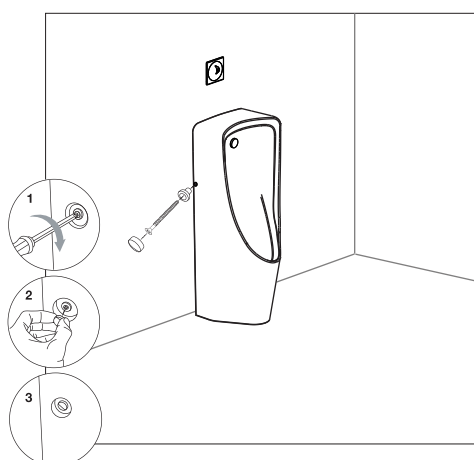

Fix the urinal with the wall by using the screw with the wall fixing set.

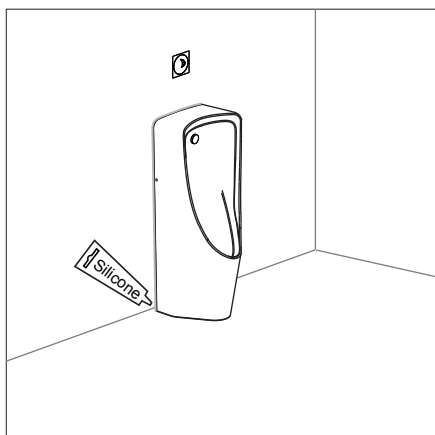

- Install the strsiliconeainer.
- Open the water supply valve to check the assembly for any leak, if no leak was found, apply silicone sealant (not supplied) around the urinal base.

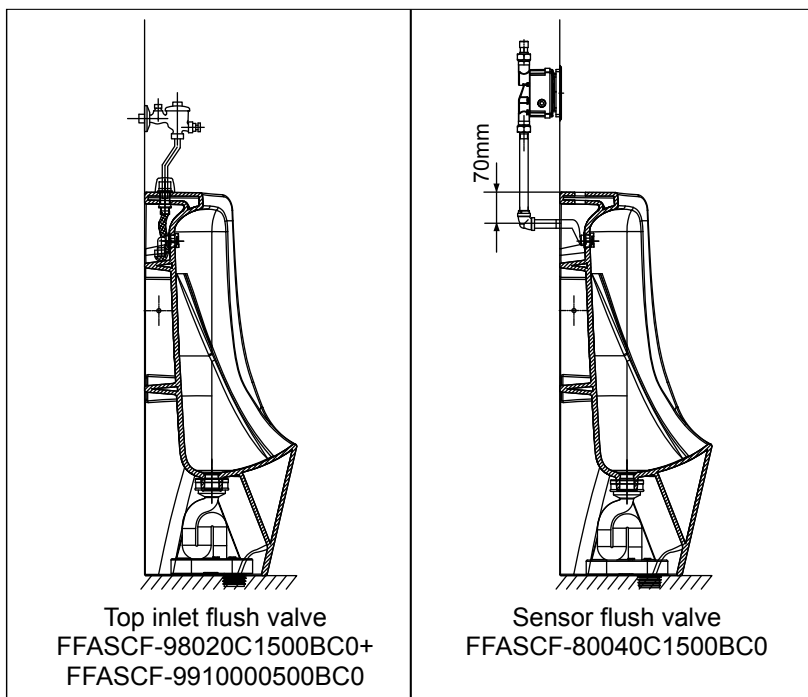

AMERICAN STANDARD ONE-YEAR LIMITED WARRANTY

If inspection of this product, within one year warranty after purchasing, confirms that its defective under normal use in material or workmanship. We will repair or, at its option exchange the product of a similar model.

The warranty does not cover the following:

1. None any documentary evidences to show the period of warranty such as receipt, warranty card, etc.
2. Consequential or incidental damages.
3. Defects or damages arising from shipping, installation, alternation, accidents, misuse or lack of proper maintenance.
4. Postage or shipping costs incurred in returning products for repair or replacement under this warranty and any labor or other costs or removal or installation of products under this warranty.
5. A product discontinuous.

American Standard(China) Limited Company
No.24 Building, Gems Park, No.487 Tianlin Road,
Shanghai, P.R.China, Post code: 200233
Tel:(86-21) 33952888 Fax:(86-21) 33674255
Hotline: 800-820-3191
[Http://www.americanstandard.com.cn](http://www.americanstandard.com.cn)